

AI518 Series Intelligent temperature controller

AI518 Series Intelligent temperature controller User's Manual

Features:

- Universal input : Tc , Rtd , analog signal
- With display , alarm and adjust function
- Advanced two degrees of freedom PID arithmetic , optional control output and modularized design
- High anti-interference ability
- Can applied to system temperature control

Safe Caution

* For your safe, please read the below content carefully before you use the temperature controller !

Please comply with the below important points:

- Warning** An accident may happen if the operation does not comply with the instruction.
- Notice** An operation that does not comply with the instruction may lead to product damage.
- The instruction of the symbol in the manual is as below:
- An accident danger may happen in a special condition.

Warning

- A safety protection equipment must be installed or please contact us for the relative information if the product is used under the circumstances such as nuclear control, medical treatment equipment, automobile, train, airplane, aviation, entertainment or safety equipment, etc. Otherwise, it may cause serious loss, fire or personal injury.
- Aspern must be installed, otherwise it may cause creepage (leakage).
- Do not touch wire connectors when the power is on otherwise you may get an electric shock.
- Do not dismantle or modify the product, if you have to do so, please contact with us first. Otherwise it may cause electric shock and fire.
- Please check the connection number while you connect the power supply wire or input signal, otherwise it may cause fire.

Caution

- This product cannot be used outdoors. Otherwise the working life of the product will become shorter, or an electric shock accident may happen.
- When you connect wire to the power input connector or signal input connectors, the moment of the No.20AWG (0.50 mm²) screw tightened to the connector is 0.74n.m~0.9n.m. Otherwise the connectors may be damaged or get fire.
- Please comply with the rated specifications. Otherwise it may cause fire after the working life of the product becomes shorter.
- Do not use water or oil base cleaner to clean the product. Otherwise it may cause electric shock or fire, and damage the product.
- This product should be avoid working under the circumstance that is flammable, explosive, moist, under sunshine, heat radiation and vibration.
- In this unit it must not have dust or deposit, otherwise it may cause fire or mechanical malfunction.
- Do not use gasoline, chemical solvent to clean the cover of the product because such solvent can damage it. Please use some soft cloth with water or alcohol to clean the plastic cover.

Model Illustration

Input: 10: loop without RS485 18: loop with RS485
Alarm: C:2loop alarm output D: 3loop alarm output(to be ordered)
Control output: R:Relay output D: 4-20mA current output S:SSR output K:SCR output
Dimension: 4.48W×48H 6.48W×96H 7.72W×72H 8.96W×48H 9.96W×96H(mm)

Ordering Model

Model	Control output	Analog output	Communication	Input	Accuracy	Code
AI518-□-SC10	Voltage output	No	Series include types of input signal	TC input RTD input	±0.5%FS	A0480AI01
AI518-□-RC10	Relay output	No				A0480AI01
AI518-□-KC10	SCR output	No	RS485	Standard analog input (0~10V, 4~20mA, 0~50mV, 0~400Ω)	A0540AI01	
AI518-□-DC10	Current output	Switchable analog				A0600AI01
AI518-□-SC18	Voltage output	No		A0730AI01	A0730AI01	
AI518-□-RC18	Relay output	No				
AI518-□-KC18	SCR output	No		A0790AI01	A0790AI01	
AI518-□-DC18	Current output	Switchable analog				A0850AI01

Note: 4-20mA output can switch analog output/PID control output in the menu. The factory is PID control output without neted.

Main Technical Parameter

1. Parameters of the whole meter

Supply Voltage	100~240V AC/DC
Total current	<30mA (220V/50Hz)
transmit output	4~20mA transmit current,load resistance 600Ωmax
Control output	Relay output load capability: 3A/250VAC
Alarm output	Relay output load capability: 1A/250VAC
Aux.voltage output	DC 24V<30mA
Dielectric strength	Among power supply terminal,relay contact point, signal input terminals>2000VAC 50Hz/1min
Communication	RS485 communication interface, MODBUSRTU Protocol
Panel protect level	IP65
Ambient Temperature	0~50°C 45~80RH%
Stock Environment	-10~60°C 25~85RH%

Operation Process

Alarm function

S/N	Address code	Variable name	Type	Byte No.	Read/Write allow	Remark
0	0x0000	1st alarm value AL1	float	4	R/W	
1	0x0001	1st alrm hysteresis HY1	float	4	R/W	
2	0x0002	1st alarm mode AD1	float	4	R/W	Note①
3	0x0003	2nd alarm value AL2	float	4	R/W	
4	0x0004	2nd alarm hysteresis HY2	float	4	R/W	
5	0x0005	2nd alarm mode AD2	float	4	R/W	Note①
6	0x0009	Adjust value PS	float	4	R/W	
7	0x000A	Input signal type INP	float	4	R/W	Note②
8	0x000B	Display high limit FH	float	4	R/W	
9	0x000C	Display high FL	float	4	R/W	
10	0x000D	Decimal point DP	float	4	R/W	
11	0x000E	Filter constant setting	float	4	R/W	
12	0x000F	Low limit value of analog BRL	float	4	R/W	
13	0x0010	High limit value of analog BRH	float	4	R/W	
14	0x0012	Unit setting	float	4	R/W	
15	0x0013	Communication baud rate BUAD	float	4	R/W	Note③
16	0x0014	Communication address ADDR	float	4	R/W	
17	0x0015	Lock password setting	float	4	R/W	
18	0x0016	Menu shielding	float	4	R/W	
19	0x0032	Measured value	float	4	R/W	
20	0x0033	Read alarm 1 status	float	4	R	Note①
21	0x0034	Read alarm 2 status	float	4	R	Note①
22	0x0037	Setting value	float	4	R/W	
23	0x0038	Controlling mode	float	4	R/W	
24	0x0039	Proportion band	float	4	R/W	
25	0x003A	Integral time	float	4	R/W	
26	0x003B	Derivative time	float	4	R/W	
27	0x003C	ON/OFF controlling hysteresis	float	4	R/W	
28	0x003D	Controlling cycle	float	4	R/W	
29	0x003E	Cooling proportion band	float	4	R/W	
30	0x003F	Cooling control cycle	float	4	R/W	
31	0x0040	Dead band of heating and cooling	float	4	R/W	
32	0x0041	Cooling protection delay time	float	4	R/W	

Connecting Drawing

Simple Problem Shooting

Display Message	Method
Display HHHH	Check input wire connects well or not / beyond the highest limit or not. Check input signal / FH and ambient temperature
Display LLLL	Check input wire connects well or not / beyond the lowest limit or not. Check input signal / FL and ambient temperature

Communication protocol

tr series meter adopts Modbus RTU communication protocol,RS485 half duplex communication,read function code 0x03, write function code 0x10,adpts 16 bits CRC check . Data frame format:

Start bit	Data bit	Stop bit	Check bit
1	8	2	without

1. Read register
For example, master unit reads float data AL1 (the value is 200)
The address code of AL1 is 0x0000, because AL1 is float data(4 byte), it covers 2 data registers . According to IEEE-754 standard, the hexadecimal memory code of decimalist float data 200.00 is 0x00004843

Menu of the Meter

Parameter	Indication	Setting range	Ex-factory setting
RL 1	Setting value of alarm 1	FL~FH	200
HY 1	Hysteresis of alarm 1	0~9999	1
RL 2	Setting value of alarm 2	FL~FH	600
HY 2	Hysteresis of alarm 2	0~9999	5
RD 1	Mode of alarm 1	1~5	1
RD 2	Setting value of alarm 2	FL~FH	600
PS	Adjust value of measuring	-1000~1000	0
LC	When the unit digit set to 1, SV couldn't be modified . The ten's digit set to 1 .	0~9999	0

Panel indication

Master unit request (read multi-register)

1	2	3	4	5	6	7	8
Meter address	Function code	High bit of start address	Low bit of startaddress	High bit of data length	Low bit of datbyte length	Low bit of CRC code	High bit of CRC code
0x01	0x03	0x00	0x00	0x00	0x02	0xC4	0x0B

Note:Please subject to the connecting drawing on the actual product if any changes.

Slave unit normal answer (read multi-register)

1	2	3	4	5	6	7	8
Meter address	Function code	High bit of data 1	Low bit of data 1	High bit of data 2	Low bit of data 2	Low bit of CRC code	High bit of CRC code
0x01	0x03	0x04	0x00	0x00	0x48	0x43	0x0D

R:Read only ; R/W: Read / Write
Note①: Alarm mode

Alarm mode	low limit absolute alarm	high limit absolute alarm	low limit bias absolute alarm	high limit bias absolute alarm	Apparent limits of an interval alarm	Alarm status ON OFF
	1	2	3	4	5	Corresponding value 1 0

2. Write multi-register
For example: The master unit write floating data AL1 (setting value is 600)
Address code of AL1 is 0x0000, because AL1 floating data (4 bytes), it covers 2 data registers . According to IEEE-754 standard, the hexadecimal memory code of decimalist float data 600.00 is 0x00001644

Dimension

Master unit request (Write multi-register)

1	2	3	4	5	6	7	8
Meter address	Function code	High bit of start address	Low bit of start address	High bit of data length	Low bit of data length	High bit of CRC code	Low bit of CRC code
0x01	0x10	0x00	0x00	0x02	0x04	0x00	0x16

Slave unit normal answer (Write multi-register)

1	2	3	4	5	6	7	8
Meter address	Function code	High 8 bits of start address	Low 8 bits of start address	High bit of data length	Low bit of data length	Low bit of CRC code	High bit of CRC code
0x01	0x10	0x00	0x00	0x02	0x04	0x00	0xC8

unsigned int Get_CRC(uchar *pBuf, uchar num){
 unsigned int i,j;
 unsigned int wCrc = 0xFFFF;
 for(i=0;i<num; i++)
 for(j=0;j<8; j++)
 if(wCrc & 1){wCrc = wCrc >> 1; wCrc = wCrc ^ 0xA001;}
 else wCrc = wCrc >> 1;
 return wCrc;

Page 01 **Page 02** **Page 03** **Page 04** **Page 05** **Page 06** **Page 07** **Page 08** **Page 09** **Page 10** **Page 11** **Page 12** **Page 13** **Page 14** **Page 15** **Page 16** **Page 17** **Page 18** **Page 19** **Page 20** **Page 21** **Page 22** **Page 23** **Page 24** **Page 25** **Page 26** **Page 27** **Page 28** **Page 29** **Page 30** **Page 31** **Page 32** **Page 33** **Page 34** **Page 35** **Page 36** **Page 37** **Page 38** **Page 39** **Page 40** **Page 41** **Page 42** **Page 43** **Page 44** **Page 45** **Page 46** **Page 47** **Page 48** **Page 49** **Page 50** **Page 51** **Page 52** **Page 53** **Page 54** **Page 55** **Page 56** **Page 57** **Page 58** **Page 59** **Page 60** **Page 61** **Page 62** **Page 63** **Page 64** **Page 65** **Page 66** **Page 67** **Page 68** **Page 69** **Page 70** **Page 71** **Page 72** **Page 73** **Page 74** **Page 75** **Page 76** **Page 77** **Page 78** **Page 79** **Page 80** **Page 81** **Page 82** **Page 83** **Page 84** **Page 85** **Page 86** **Page 87** **Page 88** **Page 89** **Page 90** **Page 91** **Page 92** **Page 93** **Page 94** **Page 95** **Page 96** **Page 97** **Page 98** **Page 99** **Page 100** **Page 101** **Page 102** **Page 103** **Page 104** **Page 105** **Page 106** **Page 107** **Page 108** **Page 109** **Page 110** **Page 111** **Page 112** **Page 113** **Page 114** **Page 115** **Page 116** **Page 117** **Page 118** **Page 119** **Page 120** **Page 121** **Page 122** **Page 123** **Page 124** **Page 125** **Page 126** **Page 127** **Page 128** **Page 129** **Page 130** **Page 131** **Page 132** **Page 133** **Page 134** **Page 135** **Page 136** **Page 137** **Page 138** **Page 139** **Page 140** **Page 141** **Page 142** **Page 143** **Page 144** **Page 145** **Page 146** **Page 147** **Page 148** **Page 149** **Page 150** **Page 151** **Page 152** **Page 153** **Page 154** **Page 155** **Page 156** **Page 157** **Page 158** **Page 159** **Page 160** **Page 161** **Page 162** **Page 163** **Page**